



Assembly Instructions - 18 Post Vertical Storage Cart

①

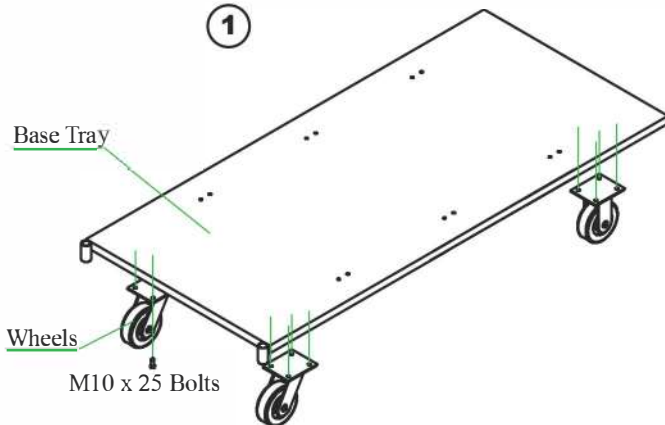


1. Attach the 4 Wheels to the bottom of the Base Tray using the M10 bolts making sure the wheel plates are facing in the correct direction
NOTE: There are two locking wheels and two standard wheels. Attach both locking wheels at one end, not diagonally across from each other

②

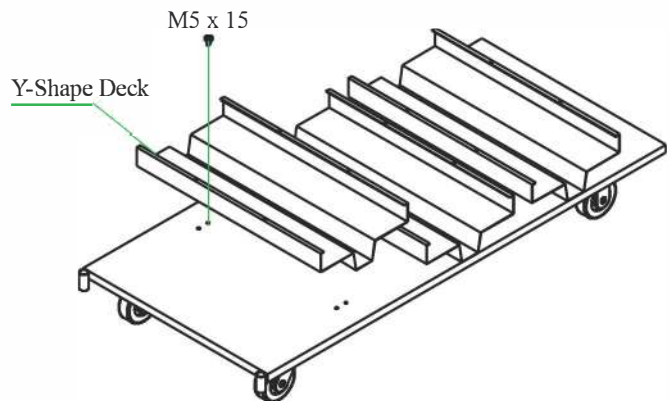


1. Set the Base Tray on its wheels
2. Using 4 x M5 bolts attach each Y-Shape Deck onto the Base Tray
3. Tighten and check all bolts.

③

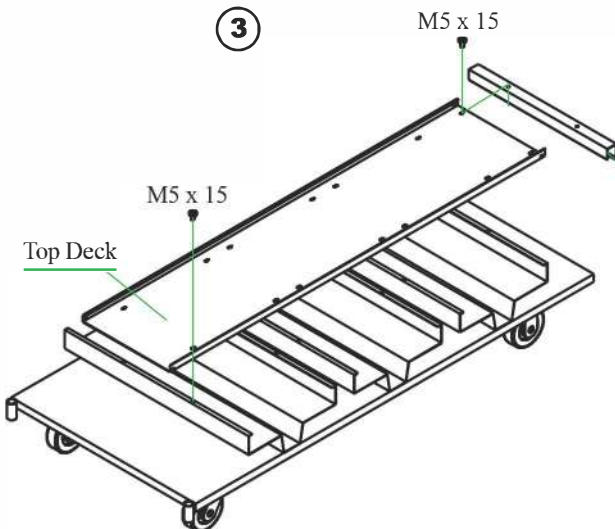

1. Using M5 bolts attach the Top Deck onto the Y-shape Decks
2. Using M5 bolts attach the Front Holder under the bottom of the Top Deck.
3. Tighten and check all bolts

④

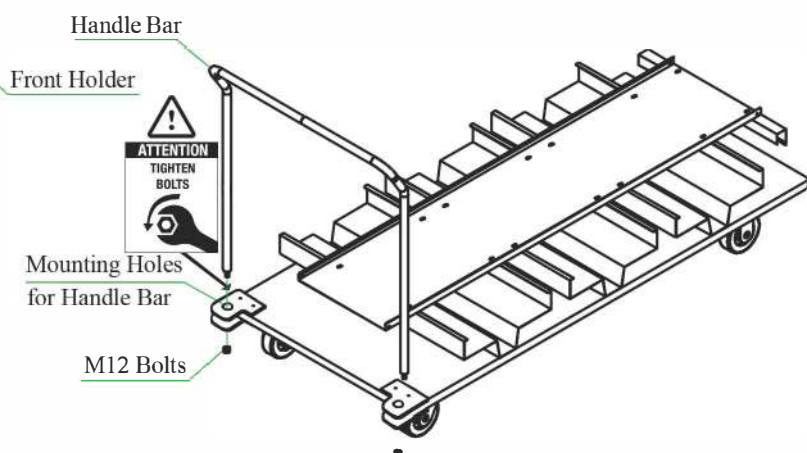

1. Place the Handle Bar inside the mounting holes on the Base Tray
2. Use the M12 bolts to attach the Handle Bar
3. Tighten and check all bolts.

Check that all bolts are tight before use.